


Installation Guide

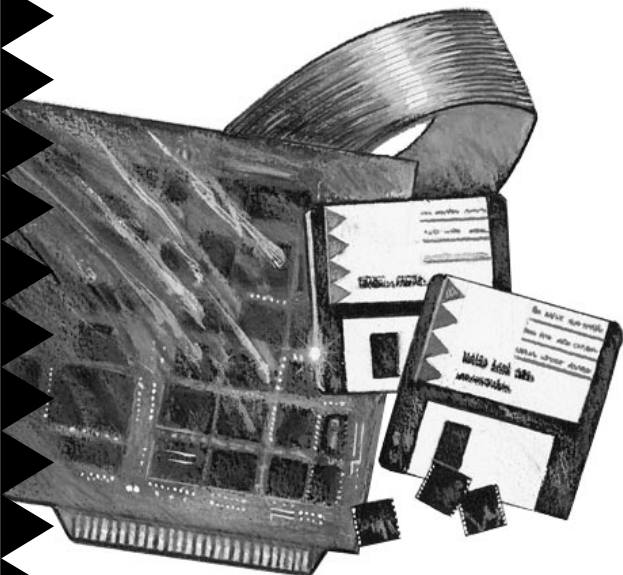

AHA-1540CF/1542CF

High-Performance Bus Master
ISA-to-SCSI Host Adapter
with SCSI*Select*[™]

 **adaptec**[®]

1 Getting Started

This guide provides the steps required for basic installation of the AHA-1540CF and AHA-1542CF ISA-to-SCSI Host Adapters. Procedures are the same for both adapters except when regarding the AHA-1542CF on-board floppy controller.

Installation Of Your Host Adapter Includes:

1. Installing the AHA (Adaptec Host Adapter) board in your computer
2. Installing your SCSI cable(s) and SCSI peripherals
3. Terminating the SCSI cabling bus
4. Using the built-in SCSI*Select*[™] utility to adjust host adapter configuration settings if necessary
5. Loading software if necessary

Caution

Turn OFF and disconnect power to the system and external equipment. Always refer to your personal computer's documentation for instructions on opening the system cover and adding option boards.

You May Not Need To Change Your Host Adapter Settings

Your host adapter is already configured for the majority of ISA (AT compatible) or EISA class computers. Read Sections 2, 3 and 4 to determine whether to alter the adapter's default settings.

- A table identifying the adapter board switch block settings can be found in Section 7 at the end of this Installation Guide.

You May Not Need To Load Any Software

Your host adapter comes equipped with an on-board BIOS that allows you to use up to seven SCSI disk drives without additional software under MS-DOS[®] version 5.0 and above. Refer to Section 5 for your specific software requirements.

For those installing Floptical[®] drives, Adaptec supplies special utility programs to provide functions not provided by DOS and Windows. Refer to Section 5 for more information.

2 Installing the Host Adapter

Board Installation

1. Turn OFF and disconnect power to the system and external equipment. Follow your ISA (or EISA) personal computer's instruction manual to remove the system cover and expose the expansion slots and external access covers.
2. Locate an unused expansion slot. Any standard ISA or EISA expansion slot will work.
3. Remove the corresponding expansion board access cover on the computer chassis.
4. Align and insert the ISA I/O bus connector on the bottom of the AHA-1540CF/1542CF into the chosen slot. Use the screw from the removed expansion slot cover to secure the AHA-1540CF/1542CF bracket to your ISA system chassis.
5. Do not replace the system cover or reconnect power yet!

When to Set the Switches

In most cases, you will *never* have to change the switch block settings. There are, however, certain options which do require adjustment to the switch block on the adapter board.

The switch block is on the upper left-hand corner of the host adapter board.

- A table identifying the switch block settings can be found in Section 7 at the end of this Installation Guide.

Here are some cases in which the switch block settings should be changed:

Controlling Floppy Drives

- If your floppy diskette drives are already running under another controller, use the switch to *disable* the AHA-1542CF floppy controller.
- If you *want to use* the AHA-1542CF floppy controller you must *disable* your existing one; refer to your computer or floppy controller user documentation.

(You do not need to disable the existing PC floppy controller if you only plan to use Floptical drives connected to the SCSI bus cable, and are

not connecting floppies to an AHA-1542CF host adapter floppy connector.)

- SW5 on the AHA-1540CF must remain in the On/Closed position, even though there is no floppy controller on that host adapter.

Multiple Host Adapters

- Select a different I/O *port address* for each host adapter installed. You must know the port address of each installed host adapter in order to adjust its settings with the SCSI*Select* utility.
- Make sure that each host adapter is set to a separate *BIOS address*. Or, *disable* the BIOS on all but one of the host adapters.

Not Controlling SCSI Disk Drives

- If you do not want to use the host adapter to control hard disk drives, *disabling* the BIOS may save up to 60 seconds of boot-up time. This would be useful when running only SCSI tape or CD-ROMs, for example.

3 Connecting Peripherals

Setting SCSI IDs

Each SCSI device connected to a host adapter must be set to a separate SCSI ID.

Your SCSI peripheral manufacturer's instructions should contain directions on how to check and adjust the SCSI IDs of those devices.

1. Make sure each device to be connected to the host adapter is set to a separate SCSI ID.
2. The AHA-1540CF/1542CF is set to ID 7 by default. This can easily be changed with the SCSI*Select* utility, as described in Section 4.
3. Your first two SCSI hard disk drives are best set to SCSI ID 0 and ID 1.

Connecting Cables

SCSI devices are cabled together in a single continuous *daisy-chain* of devices, called the *SCSI bus*. The bus may have no branches, and must run from device-to-device in a continuous series. The host adapter need not be at the end of the SCSI bus, unless only one other device is on the bus.

- Only *Single-Ended SCSI* devices are supported by the AHA-1540CF/1542CF. *Differential SCSI* devices may be damaged if connected to the AHA-1540CF/1542CF bus. Consult your SCSI peripheral user documentation.

If your system configuration includes both internal and external SCSI devices, the host adapter will be at the junction *between* the internal and external peripherals.

1. Lay out your cables and find the *pin-1* element of each cable and peripheral connector. On *internal* cables, pin 1 is usually distinguished by a contrasting color on one edge of the ribbon cable. *External* cable connectors can only be plugged-in one way, so pin-1 orientation is automatic.
2. Attach the SCSI cable(s) to the host adapter and the peripherals, using either the internal and/or external connector(s).
3. Make sure that pin-1 orientation is maintained throughout the bus. The AHA-1540CF/1542CF uses a 50-pin Centronics style external connector, and a standard 50-pin internal connector.

How to Terminate Your SCSI Bus Cable

What is termination?

The first and last physical SCSI devices on the ends of the SCSI bus must have a set of resistors called *terminators*. All other SCSI devices must have terminators removed/disabled.

The AHA-1540CF/1542CF and most SCSI peripherals come equipped with built-in terminators that can be enabled or disabled. Exactly two devices must be terminated on the SCSI bus, one at each end.

Terminating the Host Adapter

The factory installed bus terminators on the AHA-1540CF/1542CF are *enabled* by default. Host adapter termination should be *disabled* if you attach SCSI devices to both internal and external connectors, since the host adapter would then be in the middle of the SCSI bus.

The following table describes the three possible SCSI device and host adapter (AHA) configurations. Host adapter termination should be adjusted to suit.

Devices Connected To Host Adapter:	AHA Termination
Internal devices only (AHA at end of cable):	On/Enabled
External devices only (AHA at end of cable):	On/Enabled
Internal and External Devices (AHA in between):	Off/Disabled

If you need to *disable* termination on the AHA-1540CF/1542CF, do the following:

1. Complete this physical installation section.
2. Disable Host Adapter SCSI Termination by following the instructions in Section 4, *Configuring the Host Adapter*.

Terminating Other SCSI Peripherals

1. Check the manufacturer's literature to determine how to enable or disable SCSI bus termination on your SCSI peripheral device(s).
2. Install/enable termination on SCSI devices on the *ends* of the SCSI bus (cable).
3. Make sure that termination is disabled/disconnected on devices in between those at the ends of the SCSI bus.
4. Check SCSI cable connections, they may have been loosened if terminating your peripherals involved physically manipulating them.

Reassembling the System

Follow your personal computer and SCSI peripheral installation manual instructions to:

1. Replace the system cover.
2. Make sure all power switches are in the OFF position, then connect system and peripheral power cables.

Starting the System

After you have completed installing and connecting the host adapter:

1. Turn on peripheral and personal computer system power.
2. The host adapter BIOS sign-on message will appear on your computer display. The sign-on includes a listing of installed SCSI devices and should end with a BIOS status message.
3. In most cases your personal computer, host adapter, and SCSI peripherals are now ready to use.

4 Configuring the Host Adapter

Your host adapter includes a built-in, menu-driven SCSI*Select* program. SCSI*Select* allows you to change most of the option settings of the host adapter without opening the case of your computer or handling the board.

You may never need to reconfigure the host adapter. If you do, however, the following instructions tell you how to access the program.

Use SCSI*Select* to:

- Change software controlled host adapter options, such as interrupt channel.
- Install new SCSI devices; you may need to low-level format their media, or change host adapter termination; to enable Floptical or Fast SCSI support.
- Run Host Adapter Diagnostics.

Running SCSI*Select*

There are several ways to run the SCSI*Select* utility:

- Press **Ctrl-A** when prompted at boot time.
- Using DOS DEBUG: **-g=xxxx:6** where *xxxx* = host adapter BIOS address in Hex; **DC00:6** is a typical example.

Pressing **F6** while in the SCSI*Select* **Configure/View Host Adapter Settings** menu resets the host adapter to the original settings. From any menu, press **Esc** to return to the previous menu. Use the arrow (↑↓) and **Enter** keys to make selections.

Host Adapter Selection

The Host Adapter Port Address screen is the first screen to appear in the SCSI*Select* utility.

1. Select the **Port Address** of the adapter to be reconfigured. You may reconfigure any installed AHA-1540CF/1542CF. (Refer to *Multiple Host Adapters*, in Section 2.)
2. Press **Enter** to select the address and automatically move to the main menu screen.

Main Menu Options

Configure/View Host Adapter Settings

Configuration Screen: Selecting **Configure/View Host Adapter Settings** gives you access to the basic software configurable options. These options are used to reconcile I/O conflicts, change transfer rates, and set Host Adapter Termination. The host adapter BIOS Base Address is also displayed.

SCSI Device Configuration and Advanced Configuration Options: These screens are accessed from the Configuration screen described above. The AHA-1540CF/1542CF offers a number of options for advanced applications. Fast SCSI, Floptical support, and an alternate floppy controller address are enabled here.

Note

To protect you from data loss, the host adapter will suspend operation if it detects old software. Certain advanced features are incompatible with early SCSI driver software versions.

SCSI Disk Utilities

Select **SCSI Disk Utilities** from the main options menu. SCSI IDs 0 through 7 are then displayed, showing SCSI devices installed at each address, including non-disk devices. Selecting one of the installed devices causes the utilities menu to appear.

Format Disk accesses the Adaptec SCSI Low-Level Format utility. Most SCSI devices are pre-formatted, and do not need re-formatting.

Verify Disk Media scans the selected device's media for defects. If bad blocks are encountered, a prompt will ask if you want the block *re-assigned*; if you select **Yes**, that block will no longer be used.

Host Adapter Diagnostics

Not all ISA class systems are 100% IBM compatible and may not properly support bus master DMA transfers, necessary for running multi-tasking OS/2®, Windows, UNIX®, and others.

Host Adapter Diagnostics will do a bus master DMA test to memory. There should be no device drivers or TSR (Terminate and Stay Resident) programs loaded when the test is run. If the test fails, try lowering the DMA transfer rate to a lower setting from the **Configure/View Host Adapter Settings** menu.

5 Loading the I/O Operating Environment Software

DOS/Windows

Under MS®-DOS 5.0 or higher, up to seven SCSI hard disk drives can be connected to the AHA-1540CF/1542CF without additional software. (Older versions of DOS support up to two hard disk drives.)

The host adapter treats removable media drives as hard disk drives provided you *enable Treat Removable Disks Under BIOS as Fixed Disks in Advanced Configuration Options*, and do not remove the media while your computer system power is on.

Additional software is required if you desire to do the following:

- Remove and insert CD-ROM, removable hard disks, and other large media cartridges while your computer is running.
- Support more than two hard disk drives under versions of DOS prior to MS-DOS 5.0.
- Use devices other than hard disk drives such as SCSI tape, CD-ROM, scanners, etc.
- Use the Adaptec Floptical utility program to format high-density floptical diskettes.

Note

Floptical drives are only supported under DOS and Windows at the time of this document's publication.

Novell NetWare

NetWare® 4.x includes the Adaptec I/O Operating Environment and *does not* require additional software.

- To load software for Novell® NetWare 286 2.x and 386 3.x, follow the instructions included in the ASW-1440 software package.

OS/2

IBM® OS/2 2.0 and Microsoft® OS/2 1.30.1 include the Adaptec I/O Operating Environment and do not require additional software.

- To use the AHA-1540CF/1542CF under MS or IBM OS/2 1.3, follow the instructions in the ASW-1220/1420 version 1.3 software product.

UNIX

Major versions of UNIX include the Adaptec I/O Operating Environment and support the AHA-1540CF/1542CF without additional software. Current versions of SCO® UNIX, USL™ UNIX, and Sunsoft™ Interactive UNIX support the AHA-1540CF/1542CF directly.

6 Troubleshooting

If Your Computer Will Not Boot From a SCSI Disk Drive

If both SCSI and non-SCSI disk drives are installed, then the non-SCSI disk drive is always the boot device. If there is no non-SCSI disk drive:

1. Make sure your computer system's CMOS Setup is set to **No Drives Installed**, as is required for SCSI host adapters.
2. Try enabling **Dynamically Scan SCSI Bus for BIOS Devices in the Advanced Configuration Options** area of the *SCSISelect* utility. See Section 4.
3. Make sure the hard disk SCSI ID is set to ID 0. The SCSI ID is normally set with jumpers or switches on the drive. *All* SCSI devices should be set to unique SCSI IDs, ranging from 0 to 7.
4. Make sure the SCSI termination is set correctly. (See Section 3, *Connecting Peripherals*, for information on SCSI termination.)
5. A low-level format of the SCSI hard disk may be necessary. Be sure to backup first, then run the *Format* utility through the *SCSISelect* utility.

Similar utilities for removable media devices are included in Adaptec's DOS I/O Operating Environment Software, or via the BBS. See Section 3.

6. Make sure sw5 on the AHA-1540CF is in the On/Closed position. It must remain in that position, even though there is no floppy controller on that host adapter.

Conflicts With Other Option Cards

Your host adapter and all other devices may not use or occupy overlapping memory and I/O addresses. If you experience conflicts:

1. IRQ and DMA Channels may be altered with the *SCSISelect* utility.

- Port addresses and BIOS addresses for the host adapter may be viewed with the *SCSISelect* utility and changed with the switch block on the adapter board.

Data Mismatch Error

If your computer displays Data Mismatch errors:

- Check all your external SCSI cable connections; make sure termination is correctly implemented (see Section 3).
- If you have used *SCSISelect* to change the **Enable Sync Negotiation** option settings to **Yes**, use only high quality SCSI cables to create your SCSI bus. This is especially important if you have installed multiple external SCSI devices.

7 Switch Block Settings

Settings controlled by the switch block on the upper left-hand corner of the host adapter board are as follows:

sw1	On	Termination Installed		sw5	On	Disable Floppy ⁺	
	Off	Software Controlled*			Off	Enable Floppy*	
sw2	sw3	sw4	I/O Port	sw6	sw7	sw8	BIOS Address
Off	Off	Off	330-333h*	Off	Off	Off	DC000h*
On	Off	Off	334-337h	On	Off	Off	D8000h
Off	On	Off	230-233h	Off	On	Off	D4000h
On	On	Off	234-237h	On	On	Off	D0000h
Off	Off	On	130-133h	Off	Off	On	CC000h
On	Off	On	134-137h	On	Off	On	C8000h
Off	On	On	Reserved	Off	On	On	Reserved
On	On	On	Reserved	On	On	On	BIOS Disable

Off = Open

* Standard setting; Standard settings on your host adapter may be different; Adaptec custom configures for proprietary customers and resellers.

⁺ Standard on AHA-1540CF.

A table and text explaining host adapter termination can be found in Sections 2 and 3.

Note
If switch sw1 is switched to On (or Closed), host adapter termination will always be enabled regardless of the setting in the <i>SCSISelect</i> utility.

8 Adaptec Customer Support

- The Adaptec Electronic Bulletin Board Service (BBS): information on upgrades, new releases, advice, and more. The BBS can be reached at: (408) 945-7727, 1200/2400/9600/14400 baud, 8 data bits, 1 stop bit, no parity.
- The Adaptec Technical Support Hot Line can be reached at (800) 959-SCSI (7274), or (408) 945-2550.
- The Adaptec Interactive FAX line (408) 945-6776.
- Adaptec Software Sales (800) 442-SCSI (7274).
- Additional documentation for Adaptec products can be requested by calling (800) 934-2766.

FCC Compliance Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Move the equipment away from the receiver
- Plug the equipment into an outlet on a circuit different from that to which the receiver is powered
- If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions

CAUTION: Only equipment certified to comply with Class B (computer input/output devices, terminals, printers, etc.) should be attached to this equipment, and must have shielded interface cables.

Finally, any change or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the user's authority to operate such equipment.

Each AHA-1540CF/1542CF is equipped with an FCC compliance label which shows only the FCC Identification number. The full text of the associated label follows:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.



691 South Milpitas Blvd., Milpitas, California 95035

Copyright © 1993, 1994 Adaptec, Inc. All rights reserved. Adaptec and the Adaptec logo are registered trademarks, and AHA and *SCSISelect* are trademarks of Adaptec, Inc.

Printed in Singapore
Stock No.: 510382-00 Rev. B CL 6/94
Information subject to change without notice.