ADSL Ethernet Bridge Modem

Easy Start

Version 1.0

Ethernet ADSL High Speed Modem



Contents

Introduction2
Minimum System Requirements
Package
Overview
Step 1: Connecting the Modem to Your Computer/ Notebook
Step 2: Installing the Software Utilities for the Modem 9
Step 3: Configuring Your Internet Browser12
Step 4: Connecting to the Internet14
Removing the Software Utilities

Introduction

Thank you on your purchase of the ADSL Ethernet Modem! The Modem provides you with a high-speed broadband Internet connection using your existing phone line that at the same time allows you to make phone calls.

The ADSL Ethernet Modem can be connected to any computer/notebook with a 10/100 Base-T Ethernet Network card. This documentation assumes that your computer/notebook already has an Ethernet Network card installed.

Minimum System Requirements

- Pentium[®] MMX 233MHz with Ethernet Network card (installed with TCP/IP Protocol)
- A CD-ROM Drive
- Operating system support: Windows®: Windows® 98 / Windows® 98 Second Edition / Windows® Me / Windows® XP / Windows® 2000

Macintosh®: OS 9.X *third party PPPoE client required (not included in the package)/ OS 10 (in-built PPPoE client)

 Web Browser support: Microsoft Internet® Explorer[™] 4.0 (or later versions) Netscape® Navigator 4.7 (or later versions)

Package

For any missing items, please contact your dealer immediately.



- 1 The telephone extension cable used for this Modern is a UL Listed Communication Circuit Accessory, minimum 26AWG.
- 2 Different countries are bundled with different types of power adapter. The above illustration is only a representative.
- 3 Depending on your country of purchase, your package may or may not come with a POTS Splitter. The POTS Splitter is required if you are connecting a Telephone Set to the Ethernet Modem. Please refer to **Step 1.2 - Connecting to the ADSL Line** for details. POTS-Splitter can also be purchased from your dealer.

Overview

Front Indicators



1 ETH/ACT

Lights up when the Ethernet Network cable is properly connected from the Modem to the Ethernet Network Card. **Blinks** when the ADSL is transmitting/receiving data.

2 DSL

Lights up when the ADSL connection is established. **Blinks** when modem is trying to establish an ADSL connection with your ADSL Service Provider.

O POWER

Lights up when power is supplied to the Modem.

Back Panel



1 LINE

Telephone jack (RJ-11) to connect to your Telephone Wall Socket (ADSL line).

2 RESET

To reset your Modem to factory default settings. (All customised settings that you have saved will be lost!) Please refer to the below footer⁴ on how to activate the reset function.

3 ETHERNET

 $10\,/\,100$ Base-T Ethernet jack (RJ-45) to connect to your Ethernet Network card.

OC IN

To connect to your Power Outlet via the Power Adapter that comes with your package.

4 To activate the reset function:

- Ensure that your Modem is **powered on**.
- Use a paper clip or a pencil tip to depress the reset button and release. At this point, the DSL indicator will be **off, followed by the ETH/ACT** indicator. The reset is in progress.
- When the **DSL** indicator starts blinking, it means that the reset process is completed. The default settings are now restored.
- ADSL line is established once the **DSL** indicator lights up.

Step 1: Connecting the Modem to Your Computer/Notebook

Step 1.1 Connecting to the Power Outlet

Connect the ADSL Ethernet Modem to the Power Outlet via the Power adapter (that comes with your Modem package).



Step 1.2 Connecting to the ADSL Line

To connect the ADSL Ethernet Modem to the ADSL line, carried out Step 1.2(a).

To connect the ADSL Ethernet Modem to the ADSL line and a Telephone Set, carried out Step 1.2(b).

(a) To connect to the ADSL line





(b) To connect to the ADSL line and Telephone Set

The POTS Splitter is a device that allows you to connect both your Telephone cable and Telephone Set to the same Telephone Wall Socket. The device at the same time helps to eliminate background noise on the telephone line, ensuring the best possible phone performance.



If you have Telephone set(s)/Facsimile machine connected to other Telephone Wall Socket(s), you will need to plug in a Micro-Filter to each of the Telephone Wall Socket connecting to the Telephone set as illustrated.

Like the POTS Splitter, Micro-Filter helps to eliminate noise on the telephone line when your Ethernet Modem and Telephone set are both sharing the same line. The only difference is that the POTS Splitter has two RJ-11 jacks whereas the Micro-Filter has only one.

(Micro-Filter can be purchased from your dealer).





Step 1.3 Connecting to the Ethernet

To connect to the Modem to your Computer/Notebook, you need to have an **Ethernet Port** present on your Computer/Notebook.

(See the note on the following page if you are not sure of how the Ethernet Port looks like)



Step 1.4 Checking Your Connections

Please check your connections before proceeding.



Step 1.5 Powering On

- Power on the Power Outlet that is connected to your ADSL Ethernet Bridge Modem.
- Power on your Computer/Notebook (if it is not powered on).

Please proceed to Step 2.

Step 2: Installing the Software Utilities for the Modem

The software setup will install the **WinPoET Dialer**. The Dialer provides the dial-up to the Internet.

2.1 For Windows[®] 98 / Windows[®] 98 Second Edition / Windows[®] Me / Windows[®] 2000 /Windows [®]XP

- For Windows[®] 98 Second Edition users, depending on your system configurations, you may be prompted for your Windows CD-ROM. Have it ready by your side.
- i Place the **Installation CD-ROM** in your CD-ROM drive. Ensure that your ADSL Ethernet Bridge Modem is powered on.
- ii The following screen appears



iii Click Next to proceed.



iv At the Software License Agreement prompt, click Yes to proceed.

InstallShield Wizard	X
License Agreement Please read the following license agreement carefully.	win
Press the PAGE DOWN key to see the rest of the agreement.	
END-USER LICENSE AGREEMENT FOR FINE POINT TECH WINPOET AND MACPOET PRODUCTS IMPORTANTI READ CAREFULLY NOTICE TO END USER: CAREFULLY READ THE FOLLOW AGREE TO THE TERMS AND CONDITIONS OF THIS AGRE IF YOU DO NOT AGREE, CLICK CANCEL AND PROMPTLY SOFTWARE TO WIND RIVER SYSTEMS, INC. This End-User License Agreement (EULA) is a legal agreemen individual or a single entity) and Fine Point Technologies, Inc. identified above, which includes computer software and assoc Do you accept all the terms of the preceding License Agreement	INOLOGIES, INC'S ING AGREEMENT. IF YOU SEMENT, CLICK ACCEPT. RETURN THE It between you (either an for the software product iated media and printed It is you choose No, the
setup will close. To install WinPoET v6.01, you must accept th	nis agreement.
(<u>Back</u>	Yes 3 No

v Select the folder to install and click Next to proceed.



vi The following screen appears.

InstallShield Wizard	×
Setup Status	win
WinPoET v6.01 Setup is performing the requested operations.	
Installing:	
C:\\WinPoET Broadband Connection\Wr_Mac_Frames.dll	
19%	
	Cancel

vii After the above is completed, a message will prompt you to prepare for your Windows Installation CD-ROM.Click OK to proceed. (*NOTE : For Windows98* Second Edition users only)

Informati	on 🛛 🕅
(i)	Setup will now attempt to install the required networking components on your computer.
	NOTE: You may be prompted to insert your WINDOWS INSTALLATION CD-ROM MEDIA.
	ОК]

viii The following screen appears..



ix For Windows[™] 98 Second Edition users, you *may* be prompted for your Windows CD-ROM. Replace the Installation CD in your CD-ROM Drive with your Windows CD-ROM and click OK.



Click OK.

x Click Finish to restart your system. (Not applicable for Windows[®] 2000)



xi You should see the icon

WinPoET created on your Window desktop.

Proceed to Step 3.

Step 3: Configuring Your Internet Browser

3.1 Microsoft[®] Internet Explorer[™] (based on IE 5.5)

- i From your Windows desktop, double-click on your Internet Explorer icon i launch your Browser.
- ii From the Menu, click Tools and select Internet Options... .
- iii Select the **Connection** tab. Click the field, '**Never dial a connection**'. (This option will be grayed off if you have not installed an analog modem on your computer/notebook before. Proceed with 3.1 iv).
- iv Click the LAN Settings... button. Ensure that your Proxy Server is not enabled.
- v Click **OK** to close the dialog box.

You may now proceed to Step 4 to establish your Internet connection.

3.2 Netscape® Navigator

- i From your Windows desktop, double-click on your Navigator icon Not to launch your Browser.
- ii Depending on your Netscape versions, carry out one of the following instructions:

Click Options > Network Preferences. Select Proxies. Ensure that the No Proxies option is selected.

OR

Click Edit > Preferences. Select Advanced and click Proxies. Ensure that the option Direct Connection to the Internet is enabled.

iii Click **OK** for changes to take effect.

You may now proceed to Step 4 to establish your Internet connection.

Step 4: Connecting to the Internet

4.1 Establishing the Internet Connection

4.1.1 For Windows[®] 98 / Windows[®] 98 Second Edition/ Windows[®] Me / Windows[®] 2000 / Windows XP

i To connect to the Internet, double-click on

 W_{inPoeT} icon located on your Windows V_{VE01}

desktop.

- ii Enter your uername (For example, userid@isp, replace as per ADSL Service Provider instruction) and password..
- iii Click Connect.
- iv Upon successful authentication, you should be able to see the icon displayed at the corner of your Windows taskbar.

You are now ready to surf the Internet.



4.2 Checking the Connection time / Disconnecting from the Internet

Double-click on the icon 遭. The **Duration** shows the time that you are connected to the Internet. Click **Disconnect** to end the session.



(The connection speed shown on your screen does not reflect your actually connection speed. Your actual connection speed will depend on the subscription plan that you have signed-up with your Internet Service Provider).

Removing the Software Utilities



For Windows[®] 98 Second Edition users, depending on your system configurations, Windows may prompt for your Windows CD-ROM to complete the uninstallation of the WInPoET software. Please have the CD-ROM by your side.

- For Windows 98 / Windows 98 Second Edition / Windows Me / Windows 2000 / Windows XP
 From your Windows taskbar, click Start > Settings > Control Panel. Double-click on the Add/Remove Programs icon.
- ii Select WinPoET and click Change/Remove.

Follow your on-screen instructions to complete the uninstallation.

